 


LED Display A board

Included:




Screen



Base



Remote control

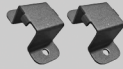

Connecting accessories



Power cord



Screwdriver







Screws



User manual

Before starting using the machine, please read this manual carefully to understand the use of the machine and precautions!

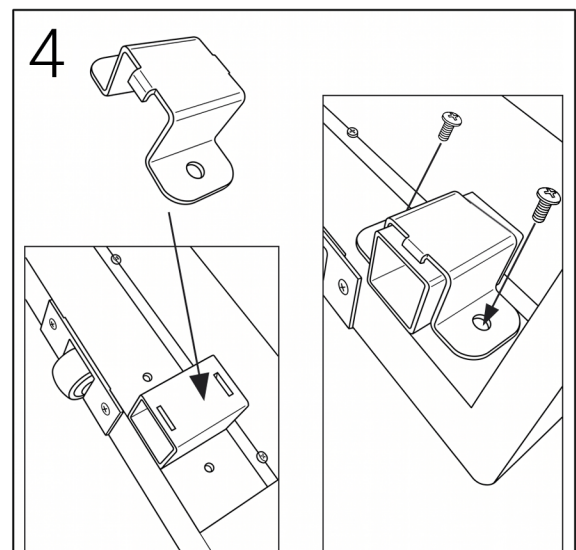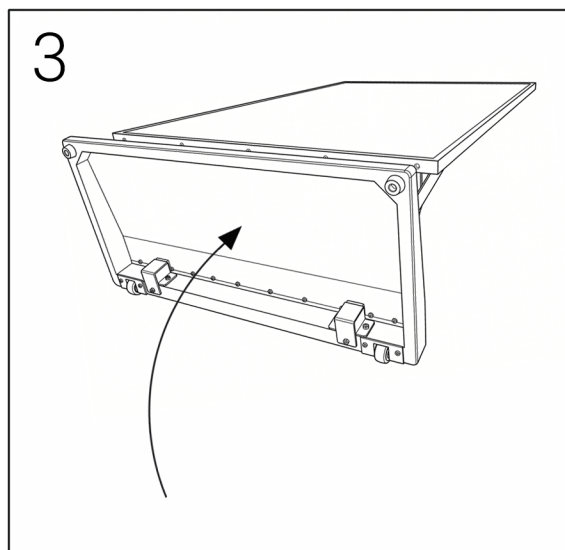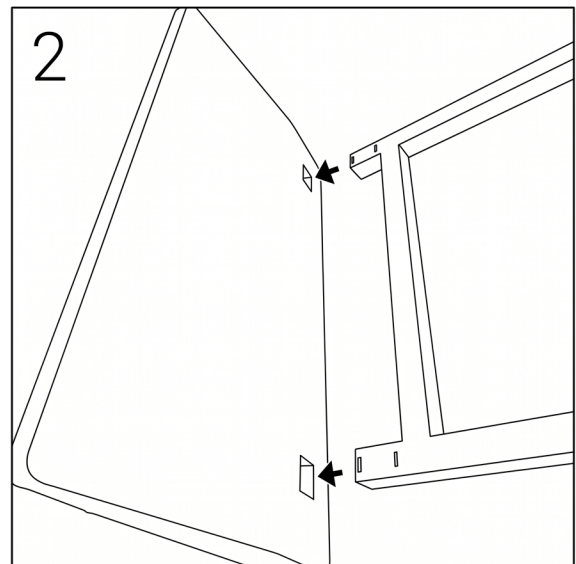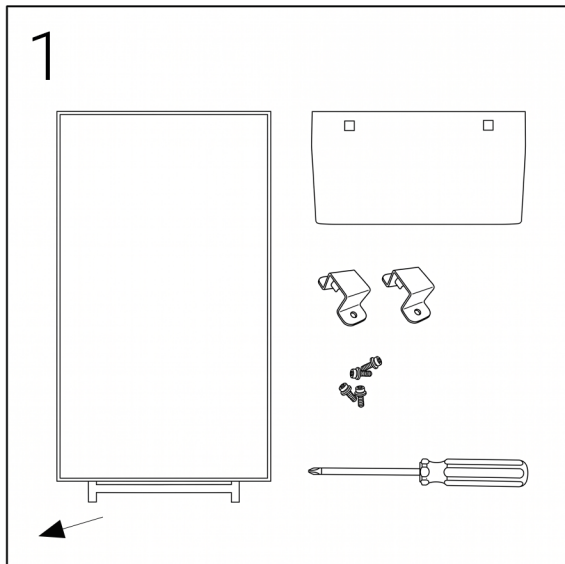

LED Display A board

Warning!

- * Only the original power adapter accessories can be used.
- * The gaps and openings on the machine are used for ventilation and heat dissipation, donot plug or cover up these gaps and openings.
- * Do not use or store the machine in dusty, humid, high-temperature environment.
- * When the machine fails, do not disassemble and repair it by yourself, contact the original factory or dealer to solve it.
- * Avoid stepping on the power cord or power adapter, to avoid the danger of leakage caused by line damage. if the lead of the power adapter is damaged, do not continue to use it, otherwise it may be dangerous.
- * In rainy weather or when you do not use this machine for a long time, please unplug the power cord.
- * Do not squeeze the display during transportation, and do not use sharp objects or hardobjects to hurt the display, so as not to cause damage to the display.
- * Please use a dry soft cloth or a soft cioth slightly dipped in soft cleaning to clean the machine. Do not use any kind of solvent such as alcohol or gasoline, other wise it may damage the surface treatment layer.
- * Make sure children understand the dangers of climbing this product. Dropping or shipping this product can cause serious life injury.
- * Be sure to organize the cable connected to the product in time to avoid tripping pulling or grabbing.
- * When using the remote control, aim it at the center of the screen for a better user experience.
- * Before inserting a USB flash drive to copy content, be sure to open the information release software app "Medioplayer".


Step 1: Take the base, screen, stand, connecting components, screwdriver and screws out of the packaging box.

Step 2: Insert stand into holes of the base

Step 3: Carefully lay the structure on its back to gain access to the bottom of the base

Step 4: Take out the connecting accessories, align the accessories withthe column slots and the base screw holes. Use a screwdriver to align and fasten the two screws into the holes, then tighten them one by one. Repeat the same operation for the column on the other side.

Remote Control Instruction

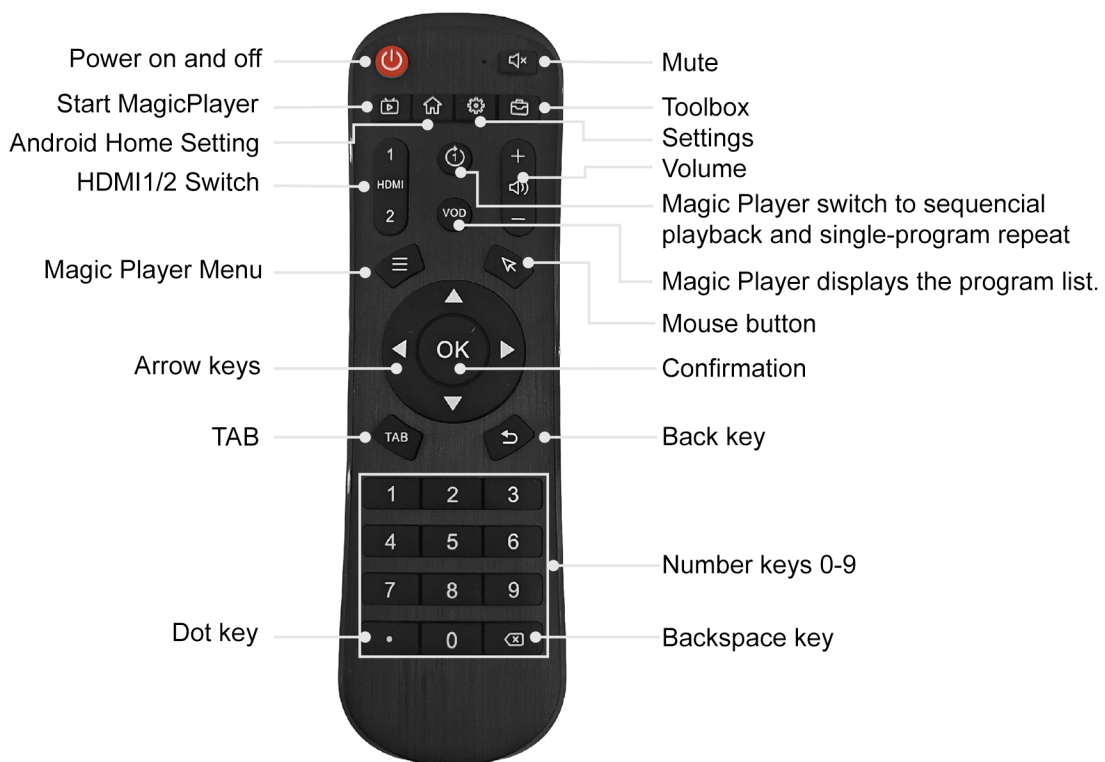

LED Display A board

Button Function Description


- Power Key: When powered on, short press to turn off the screen, long press to bring up the menu with "Power Off" and "Restart".
When the screen is off, both short press and long press will turn on the screen.
When powered off, both short press and long press will turn on the device.
- HDMI1/2 Switch: Used to switch between HDMI external signal source interfaces.
- Direction Keys: Select the corresponding functions by moving up, down, left and right.
- Confirm Key: Confirm the selected function. Press it on the Magic Player interface to switch between pause and play.
- Back Key: Press to return to the previous page.
- Home Key: Press to return to the Android home screen
- Volume + & Volume -: Adjust the volume level.
- Settings Key: Press to open the settings menu.
- Mouse Key: Press to enter mouse mode, where a mouse pointer will appear on the screen and can be moved using the up, down, left and right direction keys; press again to exit mouse mode.

Application installation

To start Your work and upload materials, download and install application “LedArt” to your phone from Appstore or Google Store





LED Display A board

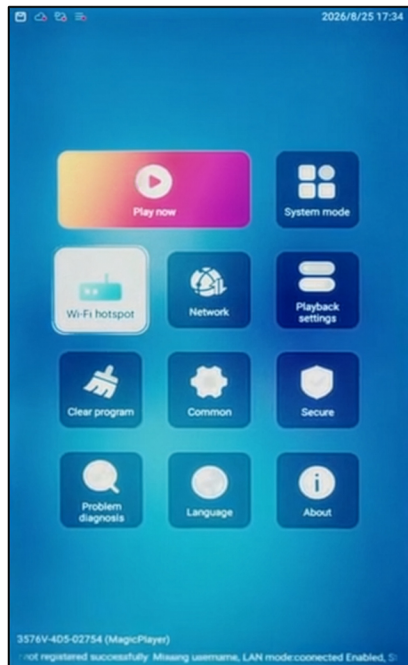

Magic Player Desktop


1. Switch ON the device, using the red power button placed on the back of device.
2. Tap the “Start Magic Player” on the Remote
3. Tap the “Magic Player Menu” to enter Menu
4. Enter the Wi-fi hotspot to configure the net.

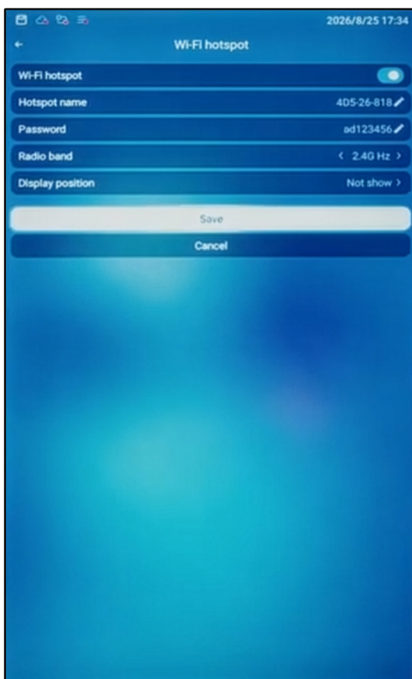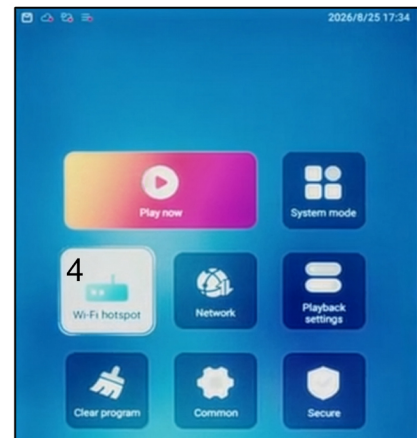



5. Configure the name of the device hotspot
6. Configure the password of the device hotspot
7. Click “ Save” to safe the settings
8. From this moment, Your device will share its own Wi-Fi network

LED Display A board




Application installation

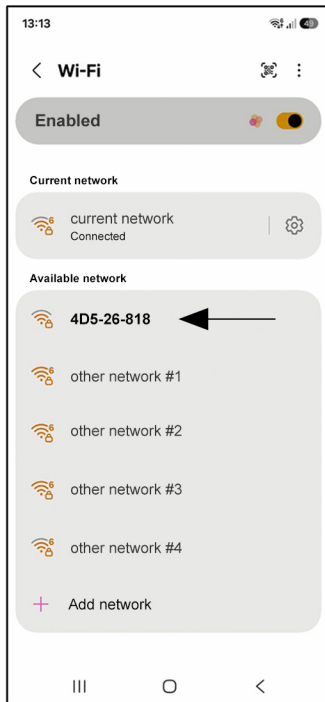

1. Open “Settings” in phone, enter Wi-Fi Settings.
2. Find the wireless network “B6L ..” and connect.
As password, type your previously created password
3. Click “Connect”
4. You are now connected to Your display.
5. Enter the application LedArt

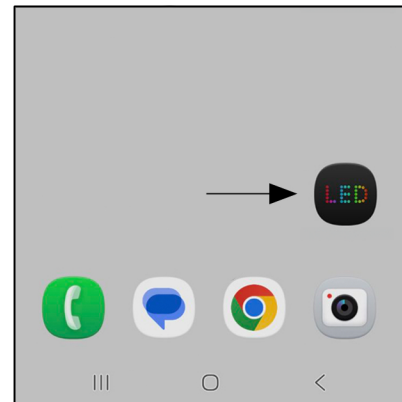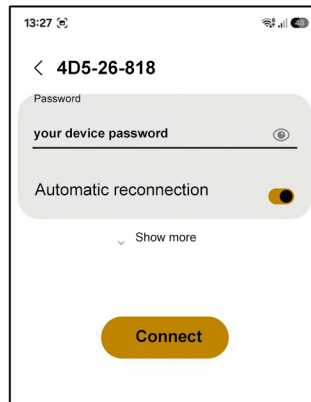


Program editing and settings



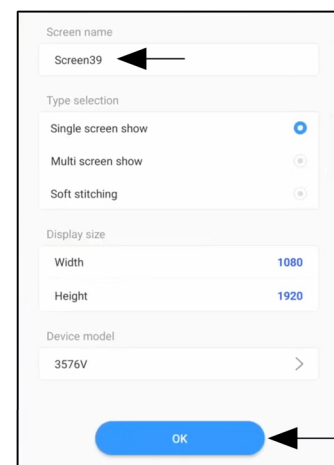
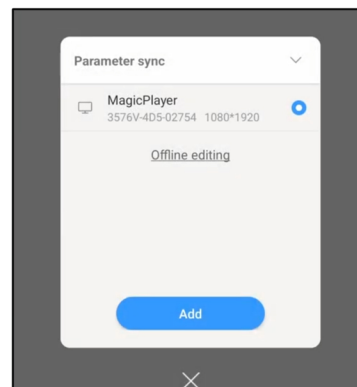
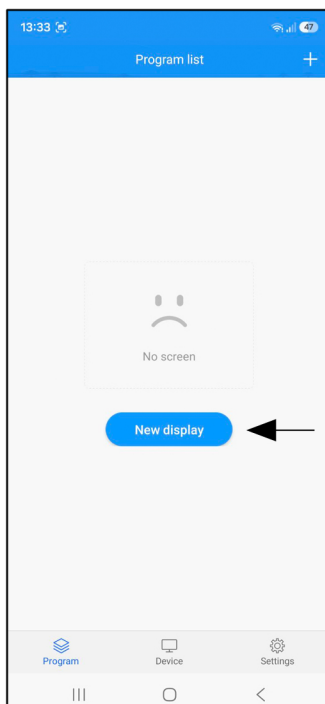


1. Open “New display” to choose the correct screen.
2. Find the current device to send the graphic file
3. Rename the screen and check the resolution.
4. Click “OK” to enter and choose the program.



LED Display A board

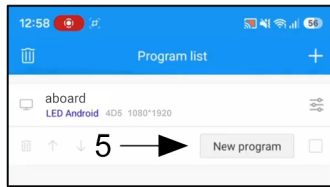

5. Tap "New program" to start editing the file
6. Default media type is "Image", remove it to change.
7. Tap "Plus" to choose the media type
8. Tap "Video" to add video media to display
9. Tap "Plus" to choose the media file to edit (10)

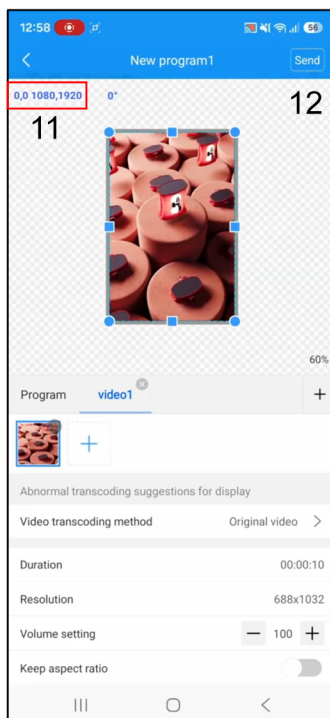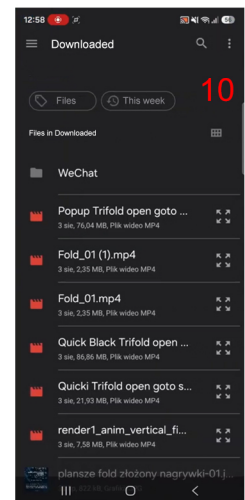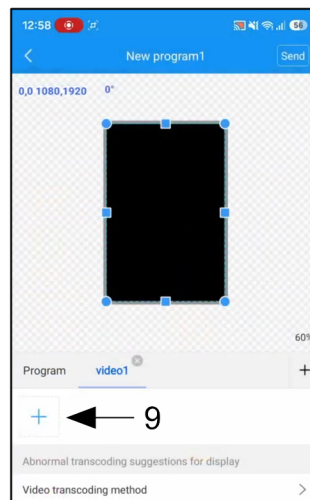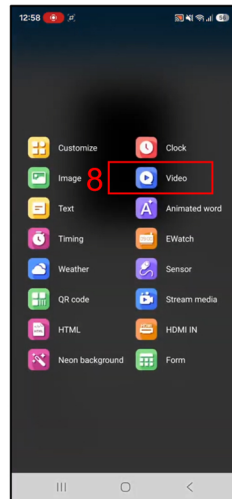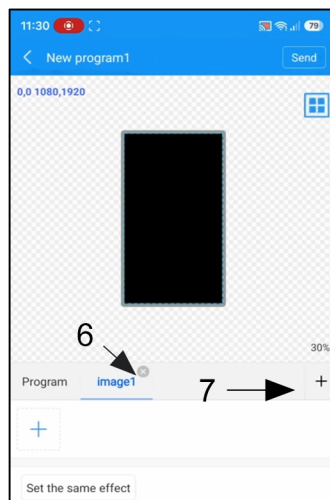

11. Your video is ready to be sent to display.
TIP- You can manually set the size and position of the video by entering the position for the x and y axes. You can also manually move the image with your finger relative to the screen, scale it or stretch it using the blue manipulators.
12. When project is ready, tap "Send" to send it to device.
13. Wait until the media is fully uploaded. Done!

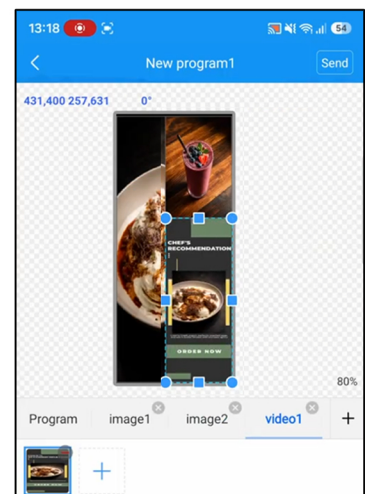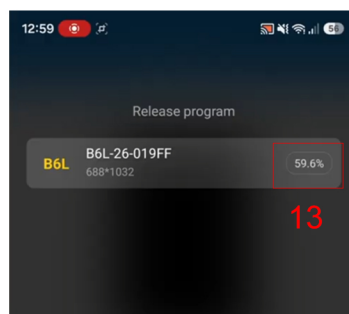

You can add various image and video files, combine them on one screen, and move and scale them freely. After editing, click "Send" to send the image and verify the result on the screen. Have fun!